

SEWING PATTERNS

A a	B b	C c	D d	E e	F f	G g	H h	I i	J j	
K k	L l	M m	N n	O o	P p	Q q	R r	S s	T t	
U u	V v	W w	X x	Y y	Z z	Ä ä	Ö ö	Ü ü	β	

	0	1	2	3	4	5	6	7	8	9
	□	▣	▢	▤	◻	!	?	□	&	/



HZL-E 80

Safety Instruction To ensure proper and safe use of the machine, be sure to carefully read the "Instruction Manual" before operating the unit.



JUKI CORPORATION holds the rights to change technical specifications without prior notice.

JUKI CORPORATION
 Household Sewing Machine Division
 8-2-1 Kokuryo-cho, Chofu-shi, Tokyo
 182-8655, Japan
 TEL: 81-3-3480-5034 FAX: 81-3-3480-5037
 http://www.juki.co.jp
 E-mail:hsm@juki.co.jp

Simple! Fun! Creative!

HZL-E80


A wide variety of stitch applications are easy to achieve for your every sewing need!



Plastic Hard Case


Dimension: 410 (W) × 300 (H) × 180 (D) mm
Weight: 7.3KGS (Machine only)

Quad-mode LED Indicator

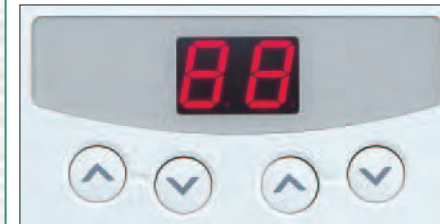


The LED indicator displays the pattern number selected. In addition, when you are adjusting the stitch length or zigzag width, it will indicate the actual stitch length or zigzag width. It will also let you know the operating status of the bobbin thread winder when the winding shaft is in its working position.

Automatic Buttonholing

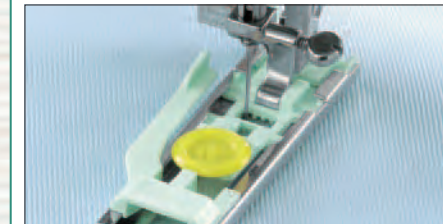

The machine conveniently sews buttonholes automatically, according to the size of the button. At the sewing-end, it will automatically stop after bartacking. You have a choice of 8 different buttonhole patterns to choose from. According to your projects, the machine can sew thin to thick buttonholes with ease.

Automatic Lock Stitch

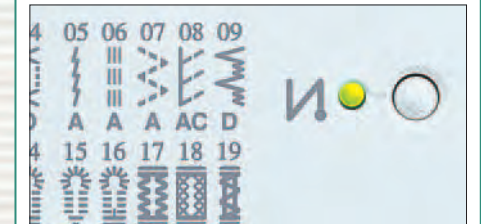

By pushing the Automatic Lock Stitch Key, the machine will sew lock stitches automatically at the sewing-start and sewing-end. This simple operation provides neat, uniform, high quality stitches.

Various Functions

Convenient Functions Keys

All Function Keys are conveniently located on the sewing arm making it easy and effective to select and operate your many sewing options.

Free Arm

Free arm is available only by removing the sewing table.

Needle stops at its lowest position.




As the needle stops at its lowest position, you can easily turn the material being sewn. By pushing the Reverse Stitch Key, the needle will go up and you can remove the material. This is a safe and effective sewer-friendly function.

Thread Tension




Finding the correct thread tension for the material you are sewing is easy with the HZL-E80.

Drop-in Bobbin

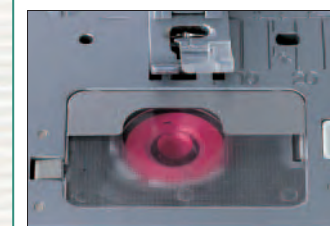

The front drop-in bobbin is easy to see and replace with no separate bobbin case to fuss with or lose. The window in the hook cover makes it easy to monitor the bobbin thread.

Auto Needle Threader

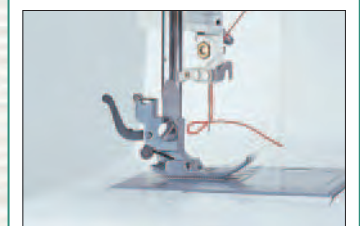

The Auto Needle Threader can put needle thread easily through needle's eye without eye strain and allow you to start sewing quickly.

Easy Start-Sew




When sewing heavy-weight material, press the button at the presser foot. The bottom of the presser foot becomes parallel to the throat plate, making it easy to start sewing from overlapped sections of heavy-weight fabrics.

Extra Feed Dog




Located in front of the needle entry hole, it enables you to start sewing smoothly and effortlessly.

Drop Feed

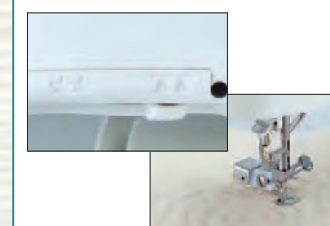

You can lower the feed dog for free-motion quilting or raise it for normal sewing, by simply moving the lever to the right or left.

Memory Function

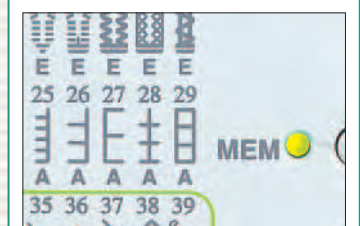

HZL-E80 has memory to store a maximum of 40 stitch pattern combinations. Enjoy and combine decorative stitches and letters (upper & lower case) as you desire.